
TIPS AND TROUBLESHOOTING

MATCHMASTER GAMES

WHY DO THE INFRA RED GAMES LOSE CONNECTION?

When playing the Infra Red games, especially penalty shoot outs, the games sensors must be pointed at each other and held as still as possible or you may lose the connection. If the connection is lost, you will have to restart the game.

WHY CAN'T I PLAY A MATCH?

You can only play a match when your lifelines are above 20.

WHY CAN'T I BUY ANYTHING FROM THE SHOP?

You must earn credits by winning matches.

LOW BATTERIES?

When the screen displays low power signals, you will need to change batteries. To avoid memory loss, press the start button until the screen goes blank, then immediately replace the batteries.

TIPS

- Check your status lines before you choose your food to make sure you're choosing the right lifelines
- In all infra red games, make sure you keep the Infra Red connector close to the other pod